

## Acer Chromebook Spin 13

### How to Powerwash Acer Chromebook Spin 13:

Log out of your profile.

Next, press and hold CTRL + ALT + SHIFT + R.

Click the **RESTART** option when it appears.

A new box will now load and you can click POWERWASH. After that you can click Continue in order to confirm the **factory reset** process.

### Hard reboot:

Refresh + power button

### Rotate screen:

Rotate screen 90 degrees Shift + Ctrl + Rotate 

### Annotate with Chromebook

1. Have student go to you webpage Click on daily Schedule
2. Hover the Webex icon and right on the icon. “**Click** the touchpad with two fingers to open the **right-click** menu.”
3. Select “Open with Webex Meet”
4. Share the content with the student
5. At top of screen there is floating menu, you will click “Assign” Allow to Annote.

### Clear browsing data:

Ctrl+Shift+Backspace

Chrome OS is a blissfully streamlined operating system that is easy to use. Keyboard shortcuts, however, can make navigating your Chromebook even easier. Here are the top dozen shortcuts.

### 1. Alt + Search

One of the first things you'll notice about a Chromebook's keyboard is the caps-lock key has a magnifying glass on it. Instead of locking caps, this key calls up Chrome OS's search window. You can still do caps lock, however, by hitting the search key while holding down the Alt key.

### 2. Shift + Escape

This is the Chrome OS equivalent of Windows' Ctrl-Alt-Delete. Shift-Esc calls up Chrome's Task Manager where you can see which apps are using the most system resources and force quit an unresponsive app. This keyboard shortcut only works when Chrome is your active window; it won't work if you have an app as its own window as your top-most, active window.

### **3. Search + L**

Hit this combo when you get up from your Chromebook to lock it. You'll need to enter your password upon your return to unlock it.

### **4. Ctrl + Shift + Q(x2)**

Hold down Ctrl and Shift and hit the Q key twice to log out of your Chromebook.

### **5. Alt + 1-9**

If you have pinned your favorite apps to Chrome OS's shelf, then you can use these shortcuts to open them. Alt-1 opens the leftmost app pinned to the shelf, for example, while Alt-9 opens the rightmost app.

### **7. Alt + [ or ]**

These two shortcuts are great for multitasking. The left bracket combo docks the active window to the left side of your screen, and the right bracket does the opposite, letting you quickly set up side-by-side windows.

### **8. Alt + -**

Alt plus the minus-sign key minimizes your active window. With your desktop clear, this combo will restore the last window you minimized.

### **9. Alt + =**

Alt plus the equals key stretches your current active window across your desktop. It's not quite full-screen mode because it leaves the header at the top of the window. You can use the full-screen key (found in the F4 spot) to go full screen.

### **10. Alt + backspace**

The backspace key deletes the character to the left of your cursor. Windows PCs, however, have a separate delete key that deletes characters to the right of the cursor. To get this Windows delete-key functionality on a Chromebook, just hold down the Alt key when you backspace.

### **11. Ctrl + 'switch window' key**

The switch window key is usually found in the F5 spot on a Chromebook keyboard. Combined with the Ctrl key, it takes a screenshot of your entire desktop and saves it to your Downloads folder. To take a screenshot of only a portion of your desktop, use Ctrl + Shift + switch window key.

## **12. Ctrl + Alt + /**

It's easier to think of this combo as using the ? symbol, which is the shifted version of the forward-slash. If you have a question about keyboard shortcuts, this combo calls up a keyboard overlay to show you the various keyboard shortcuts available for Chrome OS.